

LCD MONITOR

B21 6HL



Quick Guide



 
Acer LCD Monitor Quick Start Guide (QSG)

Important safety instructions

Please read the following instructions carefully.

- To clean the LCD monitor screen:
 - Turn off the LCD monitor and unplug the power cord.
 - Spray a non-solvent cleaning solution onto a rag and clean the screen gently.
- Do not place the LCD monitor near a window. Exposing the monitor to rain, moisture or sunlight can severely damage it.
- Do not apply pressure to the LCD screen. Excessive pressure may cause permanent damage to the display.
- Do not remove the cover or attempt to service this unit yourself. An authorized technician should perform servicing of any nature.
- Store the LCD monitor in a room with a temperature of -20° to 60° C (-4° to 140° F). Storing the LCD monitor outside this range may result in permanent damage.
- Immediately unplug your monitor and call an authorized technician if any of the following circumstances occur:
 - Monitor-to-PC signal cable is frayed or damaged.
 - Liquid spills onto the LCD monitor or the monitor is exposed to rain.
 - The LCD monitor or case is damaged.

Package contents


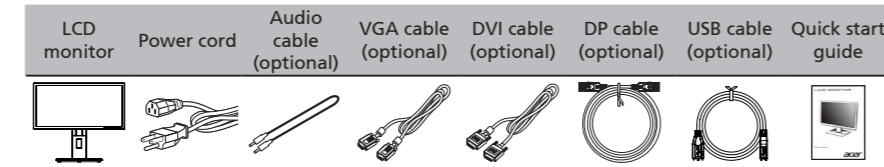


Attaching the monitor to the base

- Remove the monitor from the packaging.
- Attach the footstand to the base. (for selected models)
- Turn clockwise to lock. Ensure that the base is locked onto the stand. (for selected models)
- Secure the base to the stand by turning the screw using the intergrated tab or a suitable coin. (for selected models)

Connecting your monitor to a computer

  - Turn off your computer and unplug your computer's power cord.
- Connect the signal cable to the VGA and/or DVI-D (optional) and/or DP (optional) input socket of the monitor, and the VGA and/or DVI-D (optional) and/or DP (optional) output socket of the graphics card on the computer. Then tighten the thumbscrews on the signal cable connector.
- Optional: Connect the audio input socket (AUDIO IN) of the LCD monitor and the line-out port on the computer with the audio cable.
- Connect the USB Cable(Optional)
Connect the USB 3.0 cable to port for fast charge.
Connect the USB 3.0 cable to port.
- Insert the monitor power cable into the power port at the back of the monitor.
- Plug the power cords of your computer and your monitor into a nearby electrical outlet.

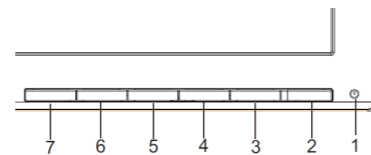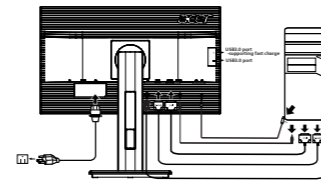

English

External controls

1&2		Power button	Turns the monitor on/off. Blue indicates power on. Amber indicates standby/ power saving mode.
3&4		Minus / Plus	If the OSD is active, press the Minus or Plus buttons to toggle between the OSD options. If the OSD is inactive, press the Minus or Plus buttons to adjust the volume. (Optional)
5		Menu	OSD functions Press to view the OSD. Press again to enter a selection in the OSD.
6		Auto	If the OSD is active, press Auto to exit the OSD. Once the OSD is inactive, press Auto and the monitor will automatically optimize the display position, focus, and clock of your display.
7		Empowering Key	<ol style="list-style-type: none"> When the OSD menu is active, this button will act as the exit key (exit OSD menu). When the OSD menu is inactive, press this button to select scenario mode.

Regulations and safety notices

FCC notices

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CE declaration of conformity

Hereby, Acer Inc., declares that this LCD monitor is in compliance with the essential requirements and other relevant provisions of EMC Directive 2004/108/EC, Low Voltage Directive 2006/95/EC, and RoHS Directive 2011/65/EU and Directive 2009/125/EC with regard to establishing a framework for the setting of ecodesign requirements for energy-related product.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with EMC regulations.

Notice: Peripheral devices

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user authority, which is granted by the Federal Communications Commission, to operate this product.

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users

CAN ICES-3(B)/NMB-3(B)

English

 
English

Disposal of waste equipment by user in private household in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Warning Message for Magnet

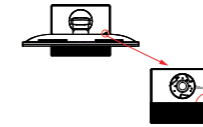

Certain electronic devices such as hard drives, USB devices, tablet computers, laptops, cellphones, watches, earphones, speakers, credit cards, magnetic ID cards, etc. are sensitive to magnetic fields and may be damaged permanently or temporarily disabled if exposed to a magnetic field that is too strong. Electronic devices should not be put close to or directly on the magnetic area of monitor base.

SPECIFICATION

LCD Panel	Driving system	TFT Color LCD	
	Size	24"W(61cm)	
	Pixel pitch	0.276mm(H) x 0.276mm(V)	
	Brightness	250cd/m ² (Typical)	
	Contrast	100,000,000:1Max. (ACM)	
	Viewable angle	170° (H) 160° (V) (CR=10)	
	Response time	5ms (on/off)	
Video	Panel Type	TN	
	Video	R, G, B Analog Interface	
	H-Frequency	30KHz ~ 80KHz	
Display Colors	V-Frequency	55-75Hz	
	Dot Clock	16.7M Colors	
Max. Resolution	180MHz		
Plug & Play	1920 x 1080@60Hz		
Power consumption @200cd/m ²	VESA DDCCI/DDC2B		
	ON Mode	20.9W(typ.)	
	Sleep Mode	0.45W(typ.)	
Input Connector	Off Mode	0.35W(typ.)	
	D-Sub	20.9W(typ.)	
	DVI-D 24pin (Only Dual-Input Model)	0.45W(typ.)	
	DisplayPort 19pin (Only DP Model)	0.35W(typ.)	
Input Video Signal	USB Hub / USB3.0 x 4 (Only USB Hub Model)		
	Analog:0.7Vp-p(standard), 75 OHM, Positive		
Speakers	Digital signal (Only Dual-Input Model)		
	DP signal (Only DP Model)		
Maximum Screen Size	2W x 2(Only Audio-Input Model)		
Power Source	Horizontal:531mm		
	Vertical:299mm		
Environmental Considerations	Operating Temp: 5° to 35°C		
	Storage Temp: -20° to 60°C		
Dimensions	Operating Humidity: 10% to 85%		
Weight (N. W.)	567 (W) x 385.5-535.5(H) x 221.2(D)mm		
Mechanism spec	6.09kg Unit (net)		
	Tilt: -5° to +35° Only at the highest point can 35 degrees of recline be offered for the angle of elevation.		
	Swivel: +60° to -60°		
	Height adjustment: 0mm to 150mm		
External Controls:	Pivot: 0° to 90°		
	Detachable foot stand: Detachable foot stand with screw release		
Switch / Buttons	Power Button	Auto/ Exit	
	Left(<) /Right(>) MENU/ENTER	E(Empowering) Key	
Functions	Contrast	RGB Color temperature	
	Brightness	Language	
	ACM On/Off	OSD position, timeout	
	Focus	Auto configuration (only Analog input model)	
	Clock	Input signal Selection (only Dual input model)	
	H. Position	DDCCI On/Off	
	V. Position	Display information	
	(Warm) Color	Reset	
(Cool) Color	Exit		

* All specifications are subject to change without notice.

Regulatory Compliance



Find manuals and other documents for your Acer product on the official Acer support website.

English