 
 
 
 
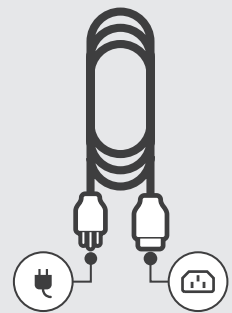 
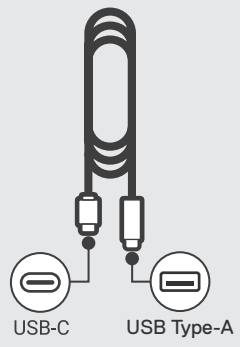 
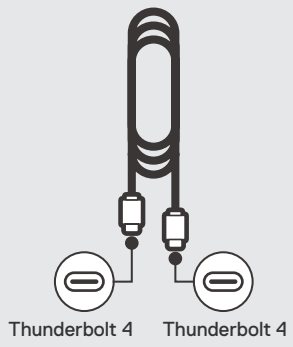 
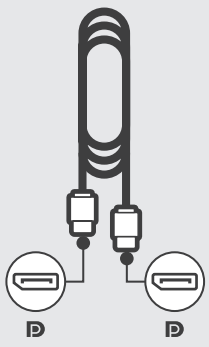 





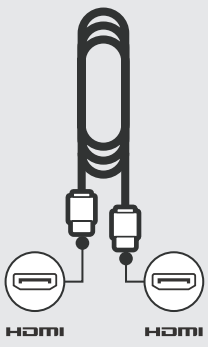


     
 
 
Dell UltraSharp 52 Thunderbolt Hub Monitor
U5226KW/U5226KW WOST
Quick Start Guide

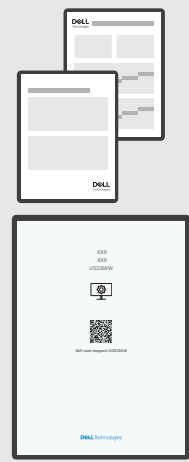 


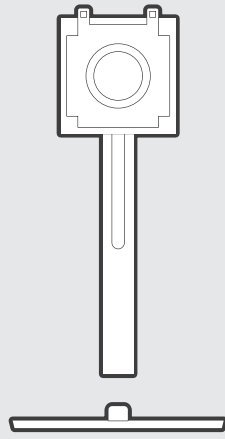 


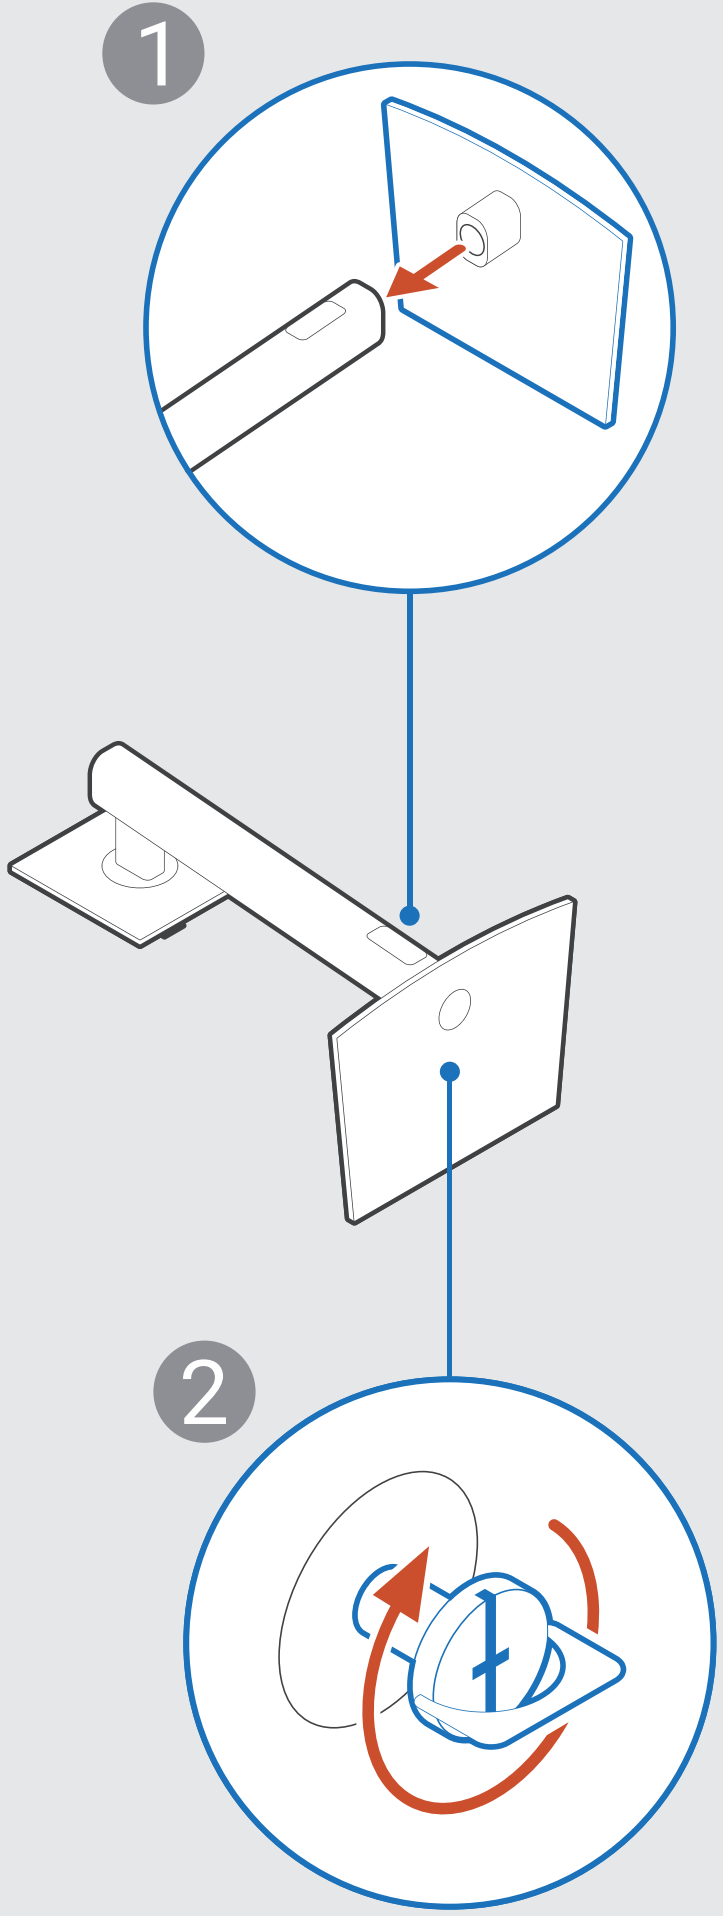 


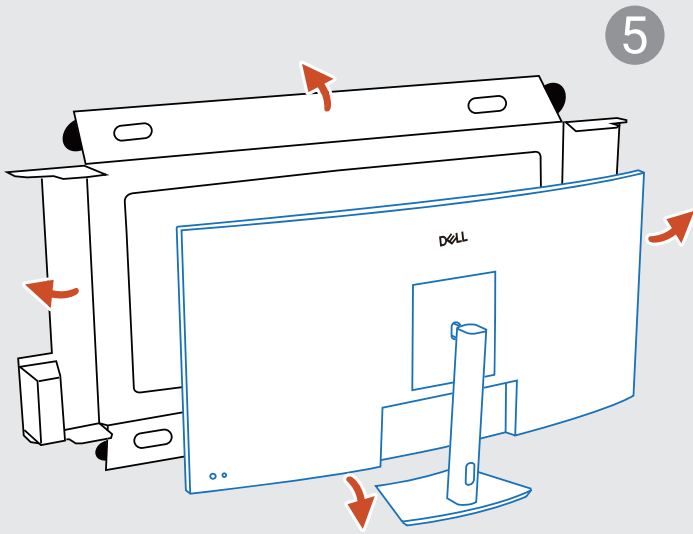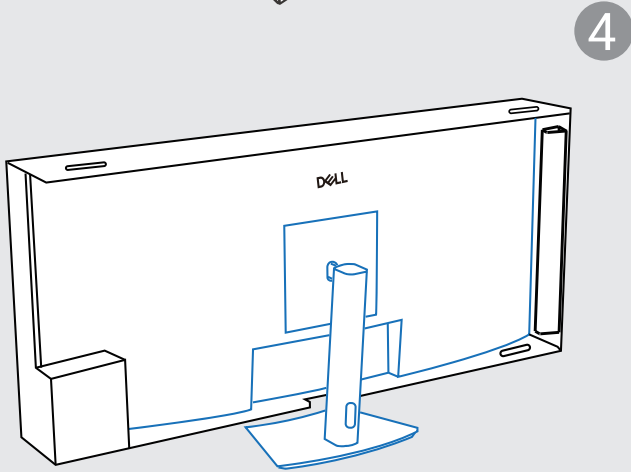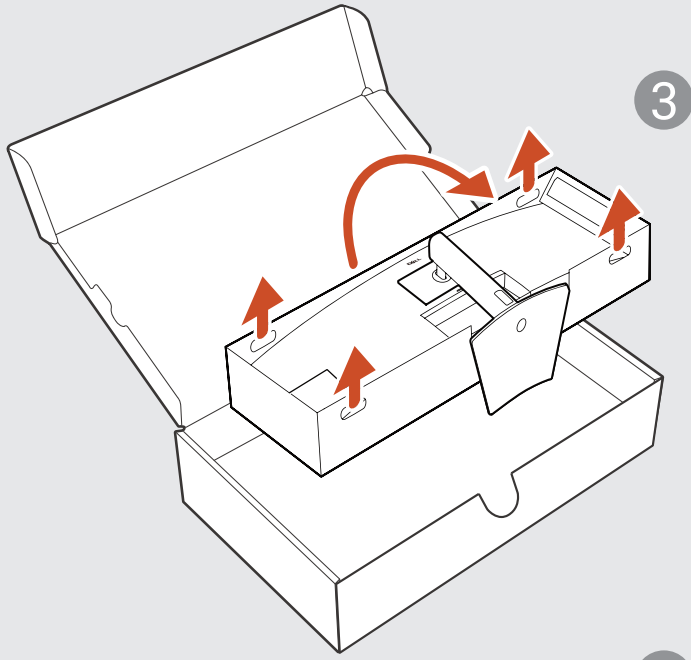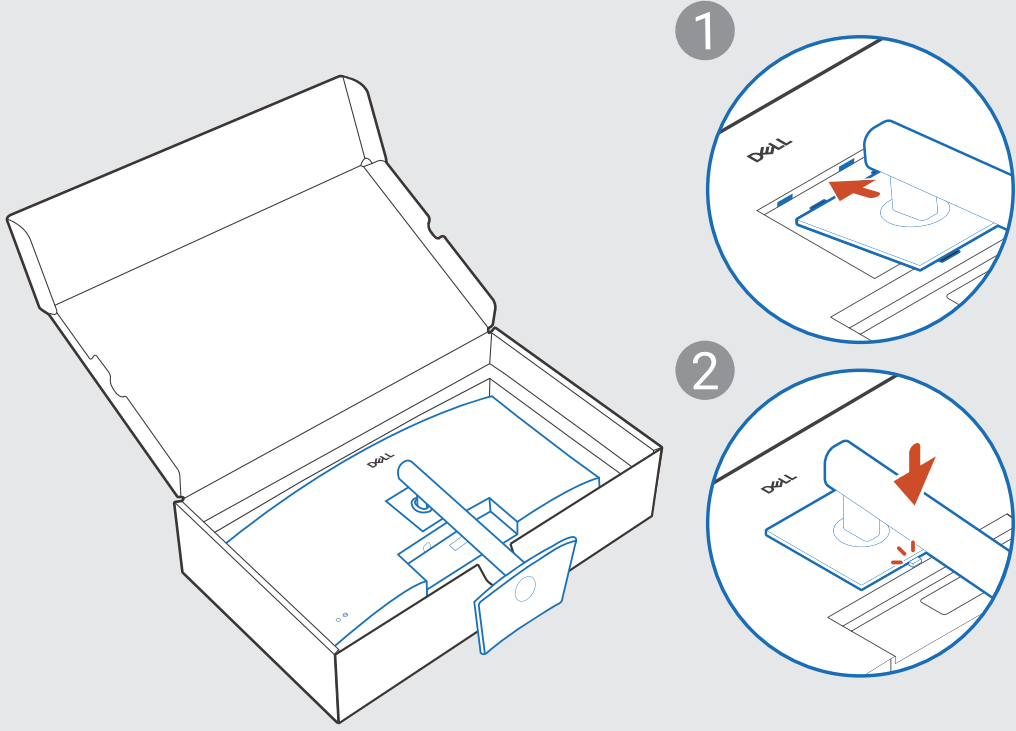 


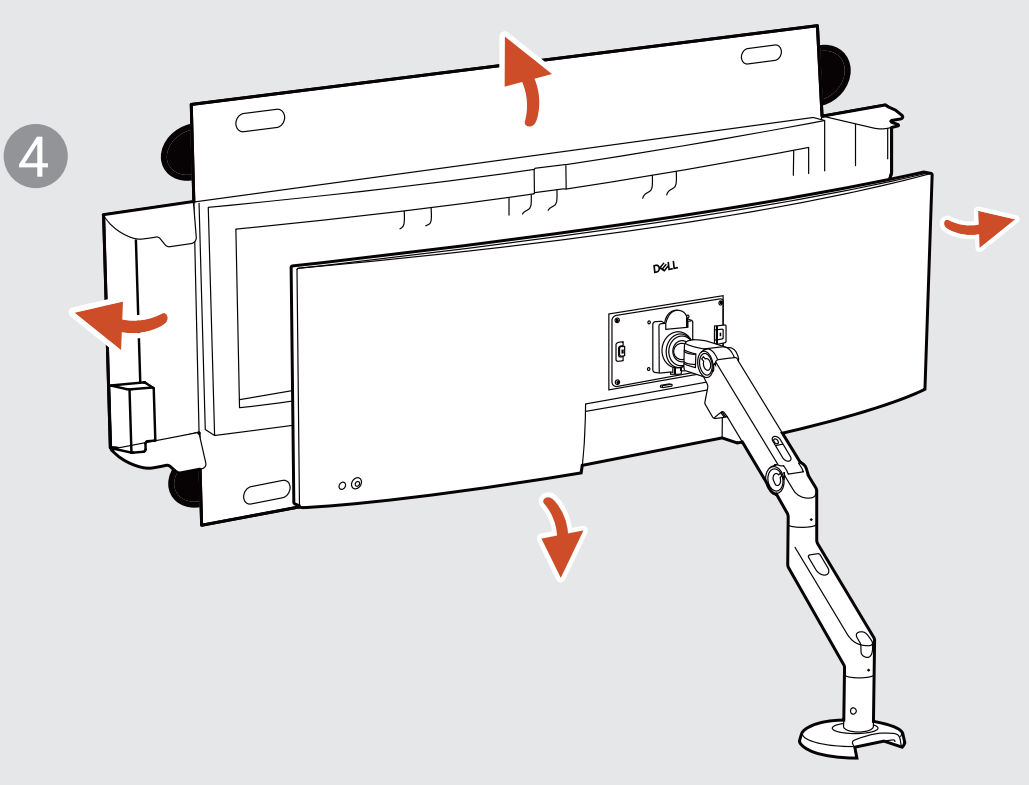 
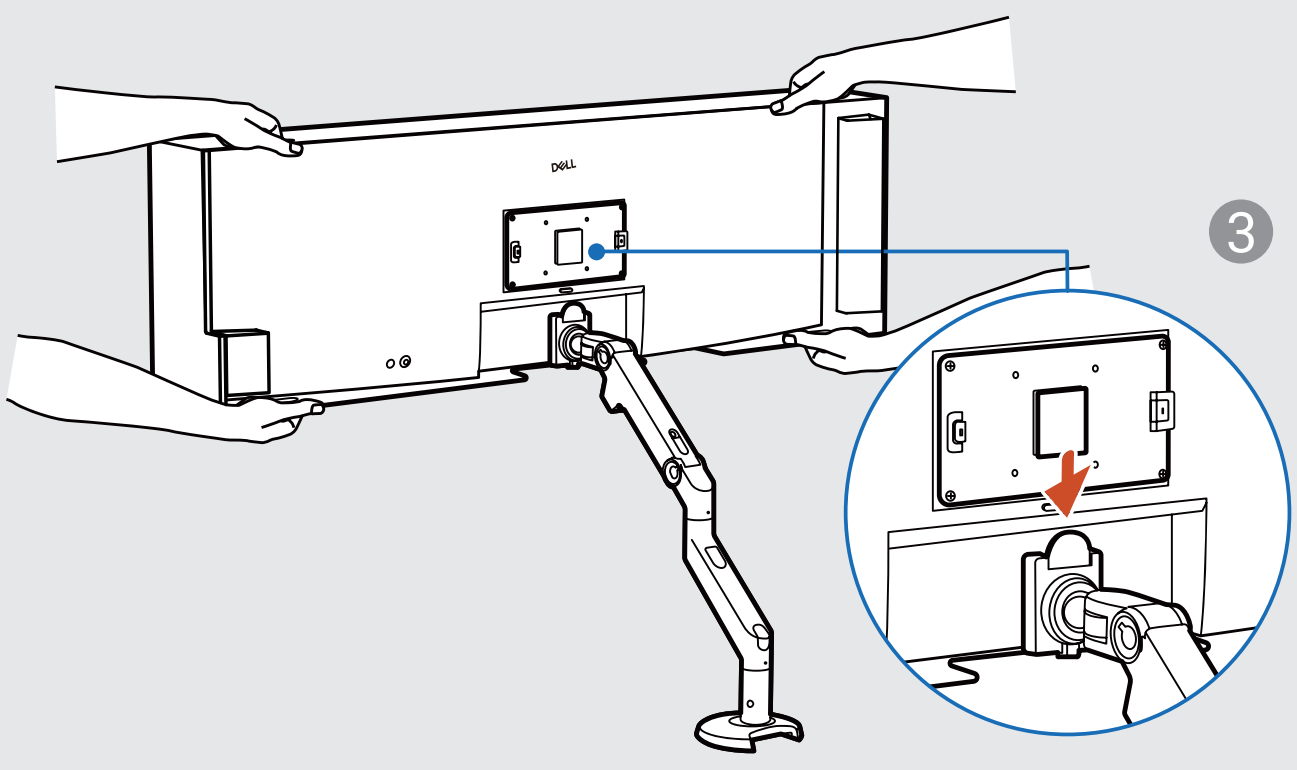 
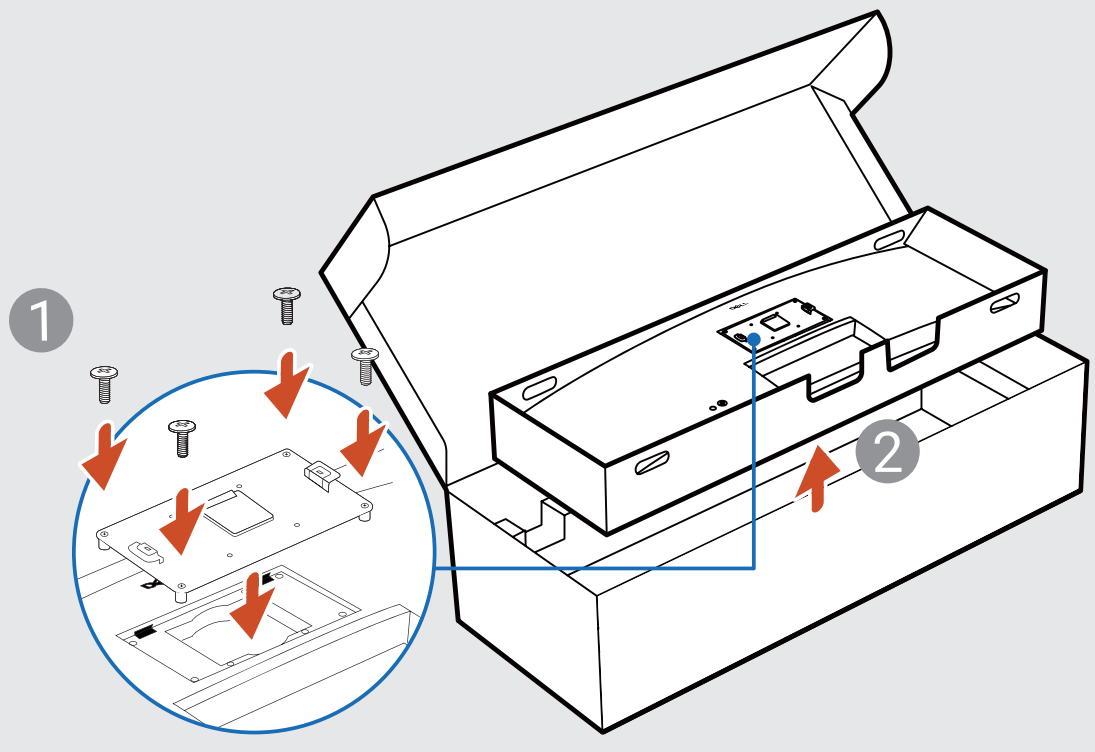 


 
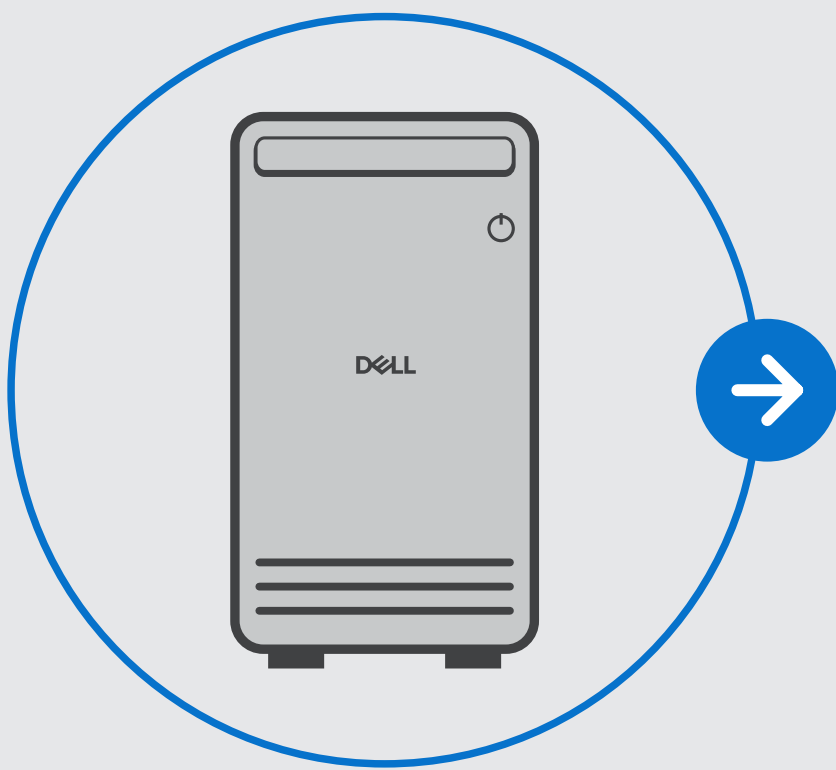 


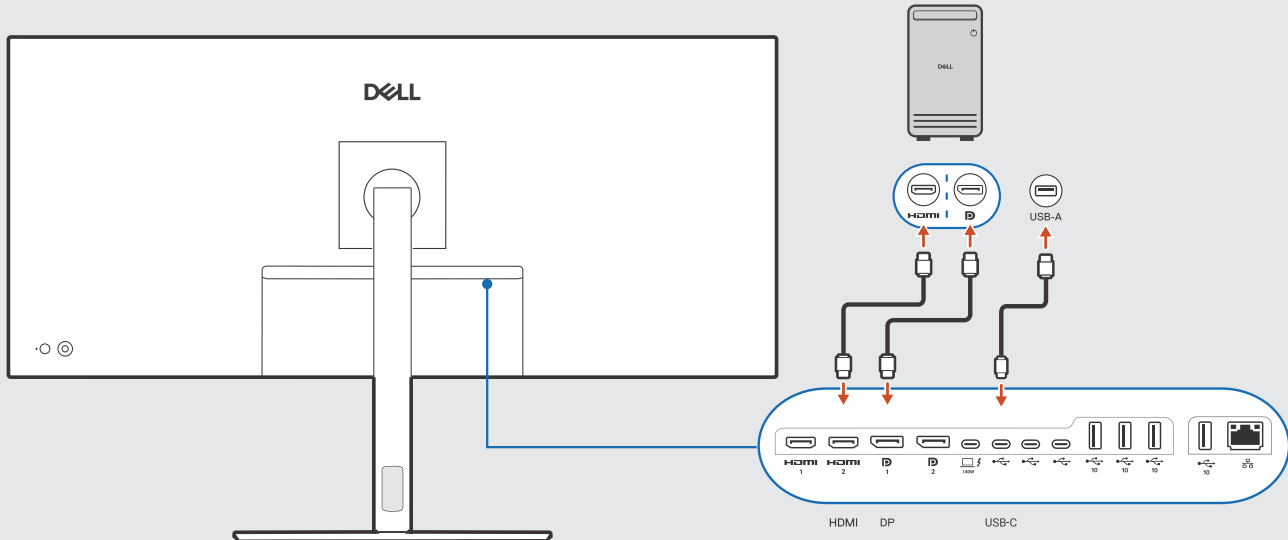 


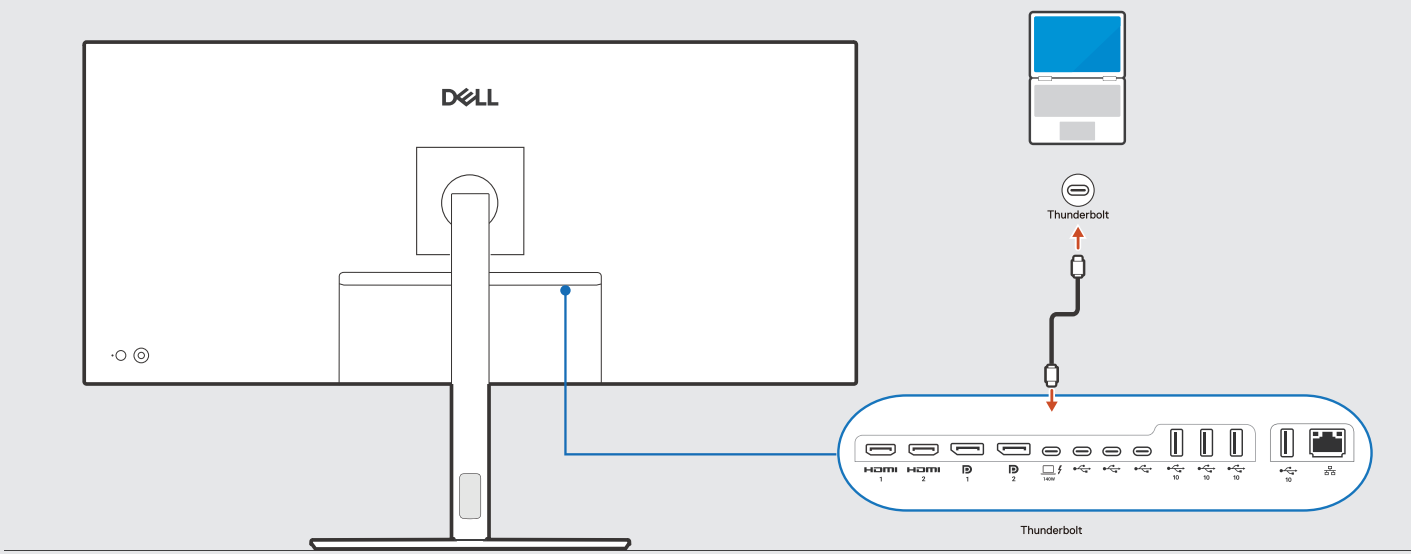

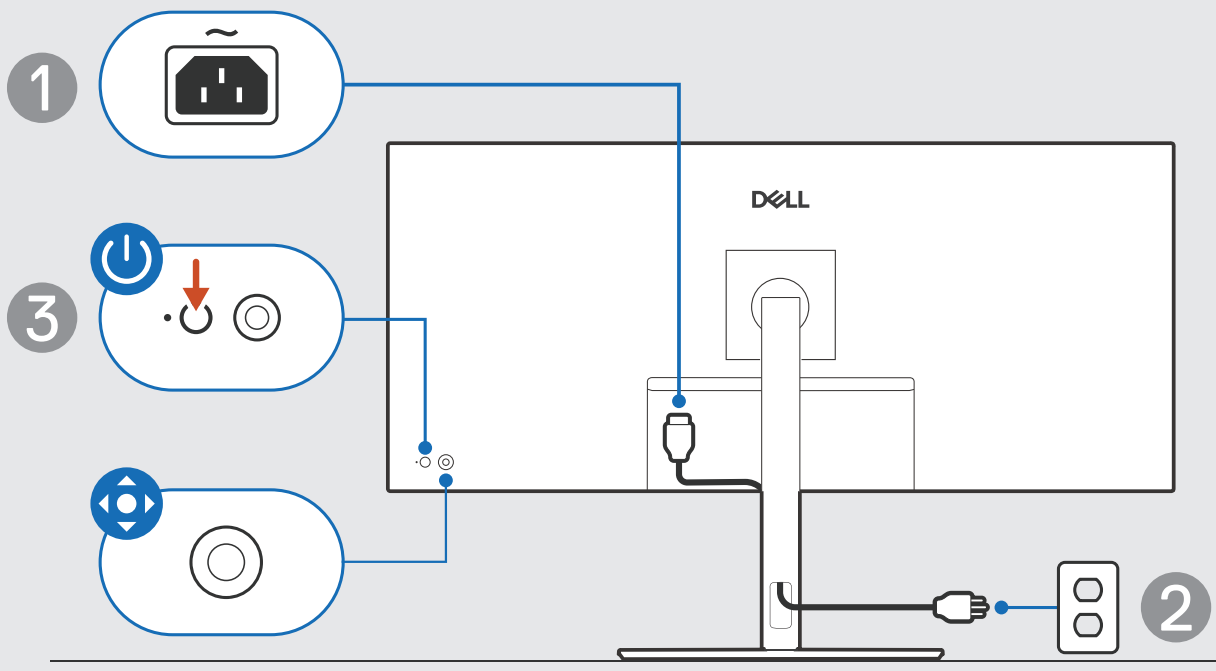


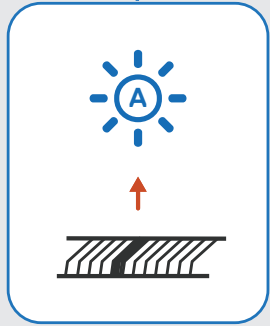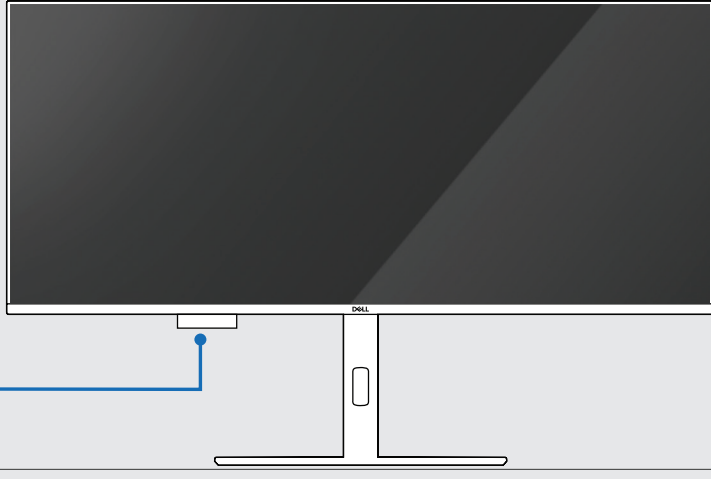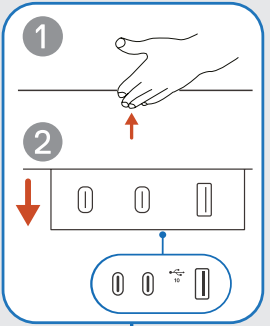

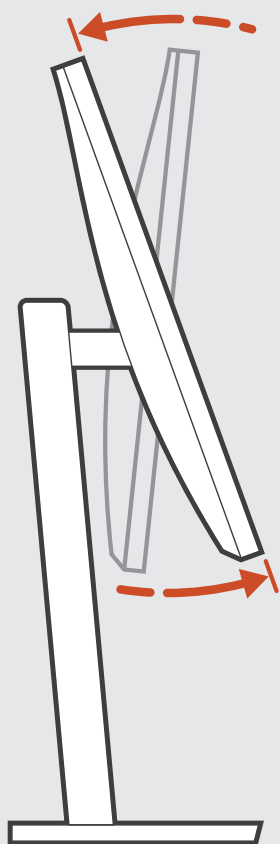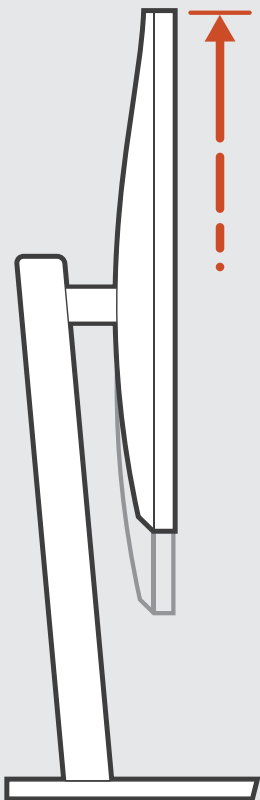


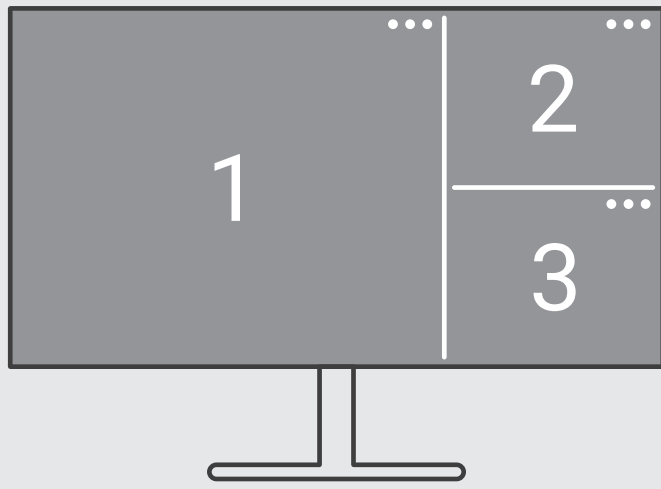

 Dell Display and Peripheral Manager:
Dell.com/support/ddpm

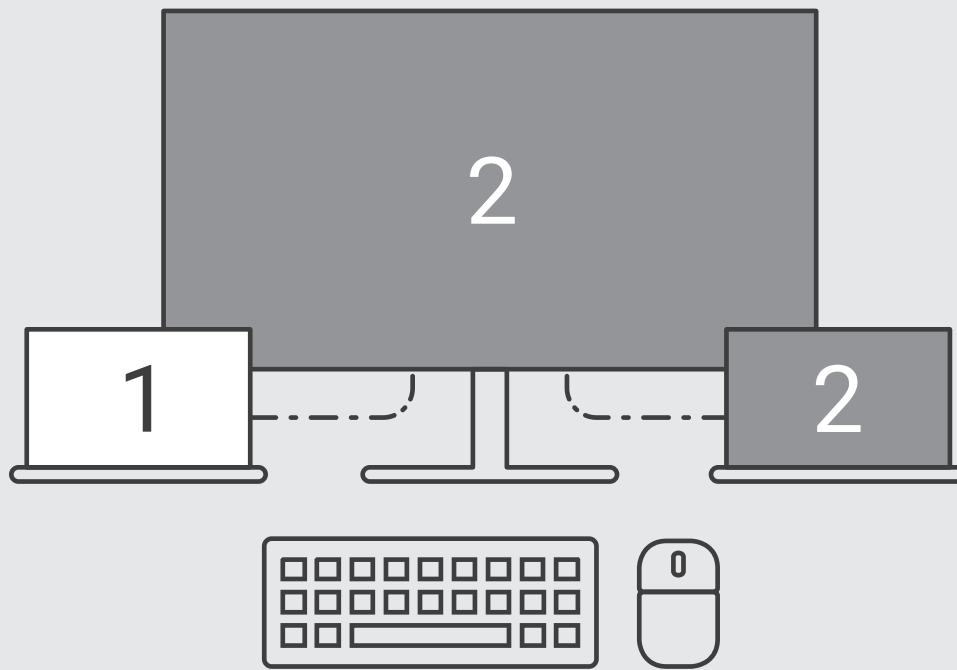

KVM

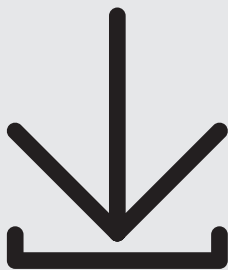 

Dell.com/support/U5226KW